


TOB5011 ASSEMBLY & INSTALLATION GUIDE

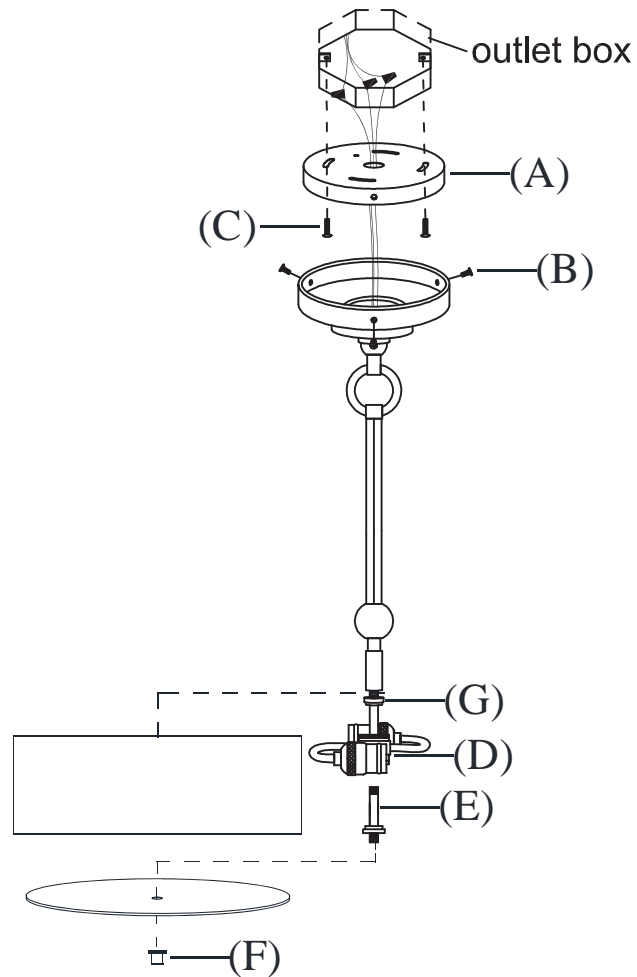

WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.

WARNING * SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.**

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT, DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

1. Attach ground fixture wire (silver or copper in color) to ground wire from wall outlet box (usually green or copper in color), fasten together with a plastic wire connector. Tightly wrap the wire connector with electrical tape so the end of the connector is sealed. **IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.**
2. Connect neutral (white) fixture wire coming from fixture base to neutral (usually white) outlet wire. Fasten both wires together with a plastic wire connector and tightly wrap the . wire connector with electrical tape.
3. Repeat the procedure with the hot (black) wires. Always make sure that no wire strands are left outside the connectors. **DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.**
4. To detach back plate (A) from light fixture by unscrewing base screws (B).
5. Position back plate (A) diagonally so that the holes of back plate (A) and ceiling outlet box are aligned. Tighten the mounting plate onto the ceiling outlet with mounting screws (C).
6. Gently push the fixture base onto the affixed back plate (A), and secure with base screws (B).
7. Thread shade support pole (E) to threaded opening at bottom of wire component (D).
8. Insert light bulbs into sockets.
9. Attach side opening of shade spider (shade shipped separately) to threaded section and secure with ring (G).
10. Remove finial (F) from bottom nipple of rod (E), attach diffuser (included with shade) over bottom threaded nipple of rod (E) and secure with finial (F).